


1-4. Opening and closing the windows

Power windows

The power windows can be opened and closed using the following switches.

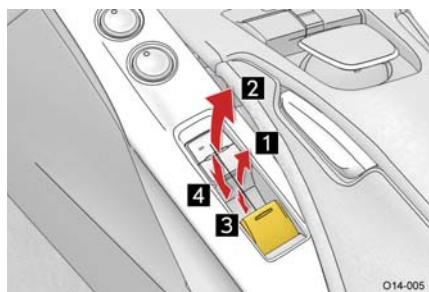

- 1 Closing
- 2 One-touch closing*
- 3 Opening
- 4 One-touch opening*

*: Pushing the switch in the opposite direction will stop window travel partway.

n The power windows can be operated when

The ignition switch is in the "ON" position.

n Door lock linked window operation

1 The power windows can be opened or closed using the key. (→P. 25)

1 The power windows can be opened using the wireless remote control. (→P. 22)

n Operating the power windows after turning the ignition switch off

The power windows can be operated for approximately 45 seconds even after the ignition switch is turned to the "ACC" or "LOCK" position. They cannot, however, be operated once either side door is opened.

n Jam protection function

If an object becomes caught between the window and the body, window travel is stopped and the window is opened slightly.

n When the power window does not close normally

If the jam protection function is operating abnormally and a window cannot be closed, perform the following operations using the power window switch on the relevant door.

1 After stopping the vehicle, the window can be closed with the door closed by holding the power window switch in the one-touch closing position while the ignition switch is turned to the "ON" position.

1 If the window still cannot be closed even by carrying out the operation explained above, initialize the function by performing the following procedure.

STEP 1 Hold the power window switch in the one-touch closing position. Continue holding the switch for a further 6 seconds after the window has closed.

STEP 2 Hold the power window switch in the one-touch opening position. Continue holding the switch for a further 2 seconds after the window has opened completely.

STEP 3 Hold the power window switch in the one-touch closing position once again. Continue holding the switch for a further 2 seconds after the window has closed.

If you release the switch while the window is moving, start again from the beginning. If the window continues to close but then re-open slightly even after performing the above procedure correctly, have the vehicle inspected by your Lexus dealer.

n Customization that can be configured at your Lexus dealer

Settings of the linked key and wireless remote control operation can be changed. (Customizable features →P. 383)

CAUTION

n **Closing the windows**

Observe the following precautions.

Failing to do so may result in death or serious injury.

- 1 Check to make sure that the passenger does not have any part of their body in a position where it could be caught when a window is being operated.
- 1 Do not allow children to operate the power windows.
Closing a power window on someone can cause serious injury, and in some instances, even death.

n **Jam protection function**

- 1 Never try jamming any part of your body to activate the jam protection function intentionally.
- 1 The jam protection function may not work if something gets caught just before the window fully closes.